

МОДИФИКАЦИИ SUZUKI LIANA (1,3Л ~ 1,8Л.)

Год	Модификация	Модель	VIN	Инструкция по эксплуатации	Доп. инструкция по эксплуатации	Электрические схемы
2001	RH413/RH416	Model A	RC11S-100001 ~ RC11S-150000 RC31S-100001 ~ RC31S-150000 JSAERC11S00100001 ~ JSAERC11S15100001 JSAERC31S00100001 ~ JSAERC31S15100001 JSAERD31S00100001 ~ JSAERC11S00150000 JSAERC11S15150000 ~ JSAERC31S00150000 JSAERC31S15150000 ~ JSAERD31S00150000 JS2RC31S□25100001 ~ JS2RC31S□25150000	99500-54G00-01E_1 99500-54G00-01E_2	—	99512-54G20-01S
2001-2002		Model B	RC31S-150001 ~ RC31S-200000 RC11S-150001 ~ RC11S-200000 RA11S-100001 ~ RA11S-150000 RA31S-100001 ~ RA31S-150000 JSAERC11S00150001 ~ JSAERC11S00200000 JSAERC31S00200000 ~ JSAERD31S00200000 JSAERC31S35200000 ~ JSAERA31S00150000 JSAERA31S35150000 ~ JSAERB31S00150000 JSAERA11S00150000 ~ JSAERC31S00150001 JSAERC31S20150001 ~ JSAERC31S25150001 JSAERC31S35150001 ~ JSAERD31S00150001 JSAERA11S00100001 ~ JSAERA11S35100001 JSAERA31S00100001 ~ JSAERA31S20100001 JSAERA31S35100001 ~ JSAERB31S00100001 JS2RC31S□25150001 ~ JS2RA11S□25100001 ~ JS2RA31S□25100001 ~	99500-54G00-01E_1 99500-54G00-01E_2	99501-54G00-01E	99512-54G20-01S
2002-2003		Model C	RC11S-200001 ~ RC31S-200001 ~ RA11S-150001 ~ RA31S-150001 ~ JSAERC11S00200001 ~ JSAERC11S00250000 JSAERC11S35200001 ~ JSAERC11S45200001 ~ JSAERC31S00200001 ~ JSAERC31S00250000 JSAERC31S30200001 ~ JSAERC31S35200001 ~ JSAERC31S45200001 ~ JSAERC31S45250000 JSAERD31S00200001 ~ JSAERD31S00250000 JSAERA11S00150001 ~ JSAERA11S00200000 JSAERA31S00150001 ~ JSAERA31S00200000 JSAERA31S30150001 ~ JSAERA31S35150001 ~ JSAERA31S45150001 ~ JSAERA31S45200000 JSAERB31S00150001 ~ JSAERB31S00200000 JS2RC31S□35200001 JS2RA31S□35150001	99500-54G00-01E_1 99500-54G00-01E_2	99501-54G00-01E 99501-54G10-01E 99501-54G20-01E (климат-контроль)	99512-54G20-01S
2003-2005	RH416	Model D	RA31S-200001 ~ RA11S-200001 ~ RC11S-250001 ~ RC31S-250001 ~ JSAERA11S00200001 ~ JSAERA31S00200001 ~ JSAERA31S40200001 ~ JSAERA31S45200001 ~ JSAERB31S00200001 ~ JSAERC11S00250001 ~ JSAERC31S00250001 ~ JSAERC31S40250001 ~ JSAERC31S45250001 ~ JSAERD31S00250001 ~ JS2RA11S□45200001 ~ JS2RA31S□45200001 ~ JS2RC31S□45250001 ~	99500-54G10-01E	—	В инструкции по эксплуатации
2005-2007		Model G	JSAERA31S00350001 ~ JSAERA31S60350001 ~ JSAERB31S00350001 ~ JSAERC31S00350001 ~ JSAERC31S60350001 ~ JSAERD31S00350001 ~	99500-54G10-01E	9501-54G40-01E	В инструкции по эксплуатации
2003-2005	RH418	Model E	RC51S-150001 ~ RD51S-150001 ~ JSAERA51S00200001 ~ JSAERC51S00250001 ~	99500-54G10-01E	99501-54G30-24E	В инструкции по эксплуатации
2005-		Model H	JSAERA51S00300001 ~ JSAERC51S00350001 ~	99500-54G20-24E	—	В инструкции по эксплуатации
2004-	RH414D (дизель)	Model F	JSAERA71S00200001 ~ JSAERC71S00250001 ~	99500-54G10-01E	99501-73J00-01E	В инструкции по эксплуатации